

42"
47"
50"
55"

LED TV

RaK
DIGITAL FOR LIFE

MODEL:RAK-LED 4206 - 4706
5006 - 5506



OPERATING MANUAL

PLEASE KEEP THIS OPERATING MANUAL FOR FUTURE REFERENCE



OPERATION MANUATV

Please read this manual carefully before operating your set and retain it for future reference.

1

Contents.....1

Safety Instructions.....2

Operation panel and interfaces.....3

Remote control buttons and the functions.....4

Menus and submenus.....5

2

Warning: Please read the following precautions carefully before operating your set in case of any casualty.



Those actions showed in the pictures must be banned

Turn off your set immediately, pull the plug off socket, and contact the authorized service personnel without delay

for troubleshooting, when following situations occur:

Power off or unstable voltage;
Abnormal noise or smell from the internal part;
Broken AC power cord;
Damage caused by falling, knocking or striking;

Any fluid or foreign objects
fall into the cover.



※ Do not pull any plugs of your set or other electric appliances off sockets, when flammable gas leakage occurs. Shut the gas valve and open the windows immediately.


OPERATION PANE



- Do not use inappropriate AC power supply;
- Do not fix the TV set at precarious position, in case of any damages caused by falling, or even fire;
- Keep the TV set away from direct light, moist, overheat or dusty environment;
- Do not store or use the TV set in flammable or explosive environment;
- Keep the TV set away from flammable gas or corrosive gas;
- Keep the TV set away from bathroom, kitchen and so forth;



- Do not connect a lot of plugs to the same outlet, in case of the fire caused by large power consumption;
- Keep the TV set away from open fire (such as lighted candles), in case of electric shock or fire;
- Do not put any container filled with water around the TV set, in case any water drops or water splashing will cause electric shock or fire;
- Do not touch the plug with wet hand to, in case of electric shock;
-  • Do not use your set when there is a storm, especially comes with thunder; please disconnect the plugs of power supply and aerial immediately, in case of lightning stroke;
-  • Do not disassemble your set in any ways by yourselves, in case of electric shock or fire;
-  • All the repair or maintenance should be handed to authorized service personnel.

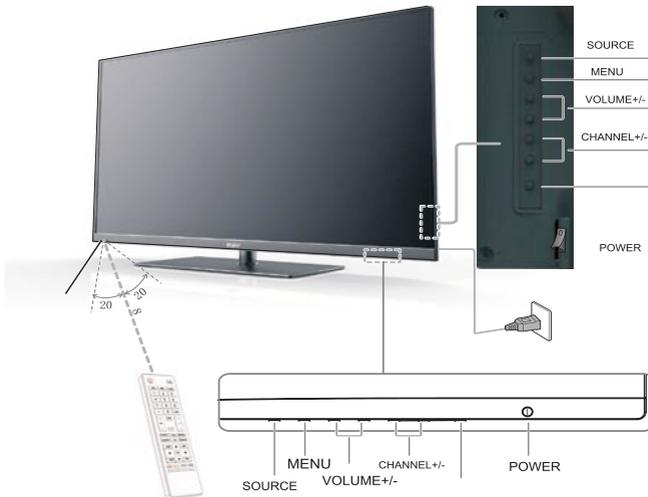

Automatic Standby Function

If there is no signal input for 15 minutes, the TV set will directly transferred to standby mode.

If your set will not be used for a long time, power switch should be turned off, and power supply should be disconnected for energy saving. When the TV set in standby mode will also cause energy consumption.

Power Switch

After connected to power supply, please press the POWER button on your set to access standby mode, and press the STANDBY button on the remote control to access play mode.

Status Indicator

Light On: Standby

Light Off: Power On

The TV set can be controlled by the remote control within 8 meters, the angle of 20° which is perpendicular to either right or left side of the signal reception area is available.

The picture of any set is only for reference, the purchased material subject may differ.

Interface

USB	CI card	AV-out	SD card	AV-in HDMI
HDMI	PC	(LAN)	LAN	Digital-audio in

The above functions are only for reference, the actual functions may differ.

- ⏻ Power:** Switch the TV power on or enter standby.
- ENERGY /SAVING:** Select energy saving settings.
- AV MODE:** Select an audio or video setting.
- ➡ INPUT:** Select a TV input source.
 - TV/PAD:** Switch to TV or Pad mode
 - Number button: Set the channel.
 - LIST:** Access the saved channel list.
 - Q.VIEW:** Quickly view the previous channel.
 - +VOL-:** Adjusts the volume level.
 - FAV/MARK:** Access your favorite channel list or mark your favorite channel.
 - 3D:** Select 3D settings.
- 🔇 MUTE:** Turn on or turn off the sound.
 - PAGE:** Move to another page in a channel list.
 - GUIDE:** View channel listings.
 - HOME:** Move to the main interface.
 - MY APPS:** Display the application window.
- ▲/▼ ◀/▶ Navigation buttons (up/down/left/right):** Scroll
 - OK:** Confirms the input.
 - BACK:** Returns to the previous screen.
 - INFO:** Show information on the current program.
 - EXIT:** Clear all on-screen displays and return to TV viewing.
 - Red, Green, Yellow, Blue buttons: Select settings of applications following the guidance on the screen.
 - TEXT:** display the text.
 - SUBTITLE:** Select the subtitle settings.

- **STOP:** Stop playing.
- ▶ **PLAY:** Start playing.
- ⏸ Pause
- ◀◀ Rewind
- ▶▶ Fast forward
- AD:** Advertisement

REC: Record

The above introductions of the functions are for reference only, subject to the actual product.



Program Scan

For first-time setup, scan programs before watching.

Select “Auto Scan” to scan all programs. Select “Manual Scan” to scan specific programs.

In the menu, press ▲/▼/◀/▶ to move the cursor. Press ▶ to select the item.. Press “BACK” to return to the previous menu.

Auto Scan

1. Press “MENU” to enter the main menu.
2. Press ▲/▼ to select “Tune”, and press ▶ to enter and select “Auto Scan”.
3. Press “OK” to start auto scan. To stop auto scan, press “BACK” to return to the previous menu.


It takes some time to scan. The program starts playing after auto scan finishes.

Network Connection

This TV supports network functions. Modes of network connection: cable network connection and wifi network connection.


Cable network:

connect to the Internet by the cable router or modem.

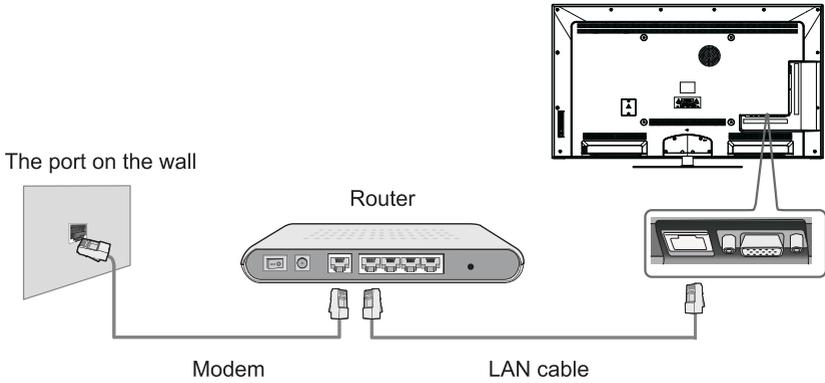



WiFi network:

connect to the Internet by WiFi

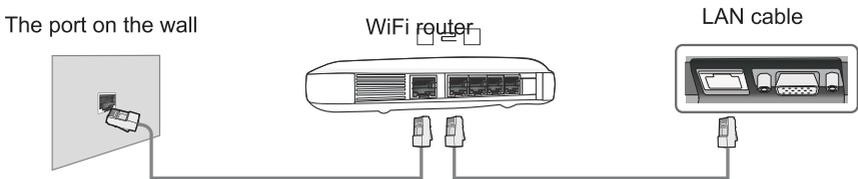

Network Settings

Press “HOME” to enter the main menu. Press ▲/▼/◀/▶ to select “System Settings” . Press “OK” to enter the submenu. Press ▲/▼ to select “Network Settings”. Press “OK” to enter. Press ▲/▼ to select “Network Status”, “Cable Settings”, “WiFi Settings”.

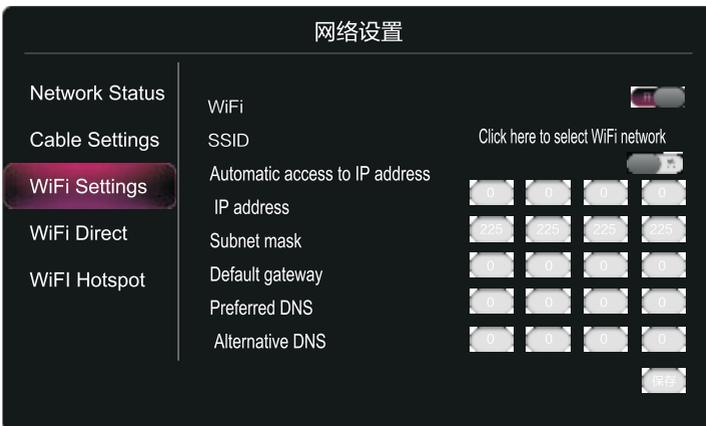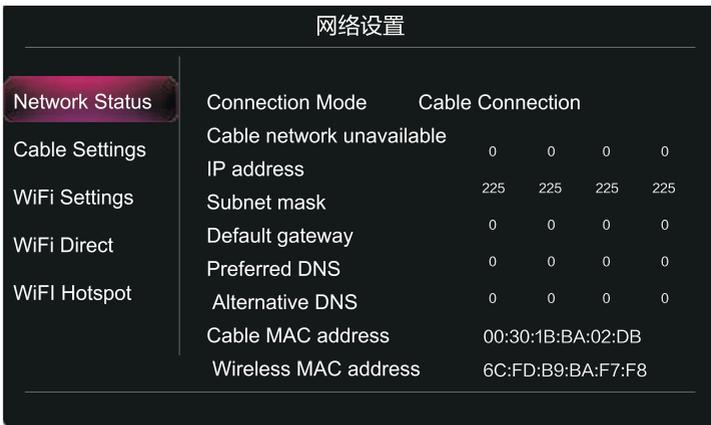

3D Functions


This TV can play 3D programs or videos converted by 2D.

Supportive formats vary with the sources.

Can not switch 2D to 3D with the network.

3D mode requires 720P format or above.

- 1、 Press ▲/▼ to select 【 2D Sources 】 or 【 3D Sources 】 and press “OK” to confirm. Select 【 Switch 2D mode to 3D mode 】 to convert 2D sources to 3D formats.
- 2、 Press “3D” to select 【 3D Settings 】 . Press ▲/▼ to select 【 3D Formats Conversion 】 , 【 3D to 2D 】 , 【 Left and Right Swap 】 , 【 Adaptive Detection 】 , 【 3D Color Optimization 】 , 【 Field Depth 】 , 【 Field Width 】 , etc. Press ◀/▶ to select the settings.

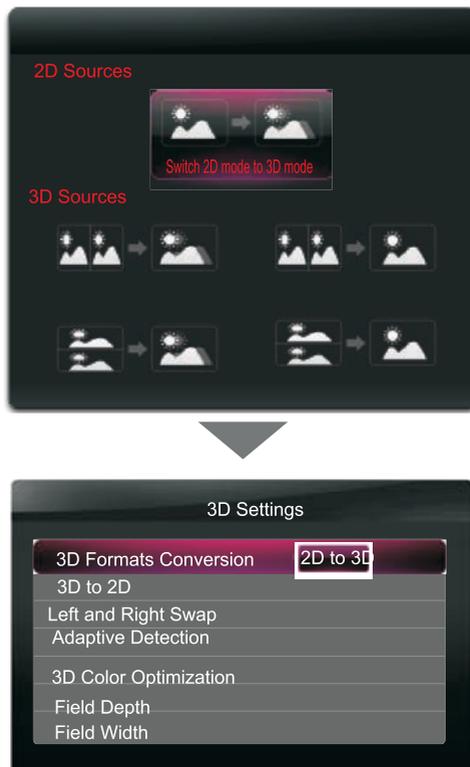

42"
47"
50"
55"

LED TV

RaK
DIGITAL FOR LIFE

MODEL:RAK-LED 4206 - 4706
5006 - 5506



دفترچه راهنما

به منظور دستیابی به بهترین نتایج و جلوگیری از هرگونه خطر احتمالی
حتماً قبل از نصب و استفاده از دستگاه، این دفترچه را به دقت مطالعه نمایید.



FULL
HD
1080p



HDMI x2



دستور العمل تلویزیون

- ۱..... قسمت ها
- ۲..... راهنمایی های ایمنی
- ۳..... عملکرد
- ۴..... دکمه ها و عملکرد روی کنترل
- ۵..... فهرست و زیر مجموعه ها

راهنمایی های ایمنی

 هشدار: قبل از استفاده از دستگاه راهنمایی ها را با دقت بخوانید.

 حرکات داخل تصویر ممنوع است.

دستگاه را فوراً خاموش کرده و از برق بکشید و با سرویسکاران مجاز تماس بگیرید.

برای رفع مشکل موقعیت های پیش آمده در ذیل:

برق قطع شده یا فشار ولتاژ نیم شده، بویا صدای غیر عادی از داخل دستگاه می آید با قسمت AC شکسته است.

در صورتی که در اثر افتادن یا ضربه دیدن آسیب دیده است.

شیئی یا وسیله خارجی به دستگاه برخورد کند.

زمانی که گاز پخش شده دستگاه را از برق نکشید درجه گاز را بسته و پنجره ها را باز کنید.

- نیروی برق AC (متناوب) نا مناسب استفاده نکنید.
- در زمان آسیب دیدگی و یا آتش گرفتن دستگاه آن را خودتان تعمیر نکنید.
- در مقابل نور مستقیم، رطوبت و محیط مرطوب و یا گردو خاکی قرار ندهید.
- دستگاه را از قرار گرفتن در مجاورت گازهای قابل اشتغال قرار ندهید.
- از یک خروجی برای چندین وسیله استفاده نکنید زیرا جمع زیاد انرژی باعث بروز آتش سوزی می شود.
- دستگاه را در مجاورت حمام و یا آشپزخانه قرار ندهید.
- دستگاه را در مجاورت وسایل روشن اشتغال زا مانند شمع روشن قرار ندهید.
- هیچ ظرف پر از آبی کنار دستگاه قرار ندهید. زمانیکه یک قطره روی آن بریزید یا آب روی آن بپاشد امکان شوک برقی آتش گرفتگی وجود دارد.
- دستگاه را با دست خیس از پریش نکشید و یا به پریش وصل نکنید زیرا باعث بروز شوک الکتریکی میشود.
- در زمان باران شدید و مخصوصا رعد و برق تلویزیون را خاموش کرده و از برق بکشید.
- هیچگاه زمانی که دستگاه دچار شوک الکتریکی و آتش گرفتگی شد خودتان ان را باز نکنید.
- تمام تعمیرات باد به سرویسکاران مجاز واگذار شود.

عملکرد حالت نیمه آماده

در زمانی که بعد از ۱۵ دقیقه هیچ سیگنالی دریافت نشود، دستگاه به صورت خودکار به حالت نیمه آمادگی می رود.

اگر دستگاه را برای مدت طولانی استفاده نمی کنید دستگاه باید خاموش شود و از پریز کشیده شود. زمانی که دستگاه در حالت نیمه آمادگی هم هست انرژی مصرف می کند.


دکمه روشن / خاموش:

وقتی که به پریز متصل کردید دکمه ی power را فشار دهید تا به حالت نیمه آمادگی دسترسی پیدا کند و دکمه standby را روی کنترل فشار داده تا به حالت نمایش دست پیدا کند.

وضعیت شناسایی

چراغ روشن: نیمه آمادگی

چراغ خاموش: روشن

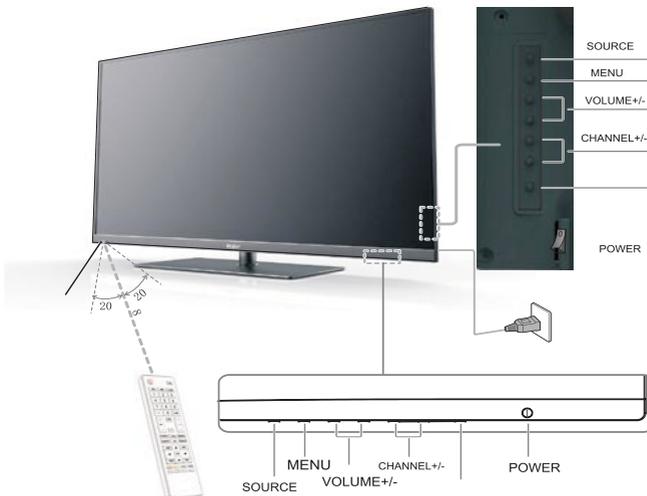

تلویزیون به همراه کنترل تا فاصله ۸ متری کار میکند و ۲۰ درجه به راست و چپ تا جایی که سیگنال در دسترسی باشد کارایی دارد.

USB	کارت CI	خروجی AV	کارت SD	HDMI در AV
HDMI	PC	LAN	LAN	ورودی صدای دیجیتال

جهت بالا فقط برای راهنمایی شما هستند و جهات اصلی ممکن است متفاوت باشند.

 قدرت: تلویزیون را روشن و خاموش کنید یا به حالت Standby یا نیمه آماده بروید.

ذخیره انرژی: تنظیمات انرژی را انتخاب کنید.

حالت AV: تنظیمات صدا و ویدیو.

 ورودی: ورودی تلویزیون را انتخاب کنید.

تلویزیون / دفترچه: به تلویزیون و یا حالت دفترچه بروید و شماره ها را برای چیدن کانال فشار دهید.

لیست: می توانید لیست کانالها را به دلخواه بچینید.

نمایش فوری: کانال قبلی را به صورت فوری نمایش می دهد.

+VOL- یا صدای زیاد یا کم: تنظیمات صدا

علامت گذاری مورد علاقه ها: به لیست کانالها بروید و کانال های مورد علاقه تان را علامت زده و اضافه کنید.



3D: تنظیمات 3D را انتخاب کنید.

بیصدا: صدا را بسته و باز کنید.

صفحه: به صفحه دیگری در لیست کانالها بروید.

راهنما: چگونگی لیست بندی کانالها را بیابوید.

صفحه اصلی: به ورودی اصلی بروید.

برنامه های من: صفحه برنامه ها را نمایش دهید.

▲/▼ ◀/▶ دکمه های جهت ها:

(بالا / پایین / چپ / راست) در فهرست بچرخید.

OK یا صحیح: ورودی را تایید میکند.

بازگشت: به صفحه قبلی باز می گردد.

اطلاعات: اطلاعات برنامه را نمایش می دهد.

خروج: هر برنامه ای روی دستگاه است را بسته و به صفحه ی تلویزیون بر میگردد. دکمه های قرمز، سبز، زرد، آبی: تنظیمات برنامه ها را با توجه به راهنمایی ها انجام دهید.

متن: متن را نمایش می دهد. توقف: اجرا را متوقف

میکند. اجرا: اجرا را شروع میکند.

زیر نویس: تنظیمات زیر نویس را انتخاب کنید.

|| وقفه ◀◀ عقب ▶▶ جلو ▶ اعلان

REC ضبط صدا

تمام معرفی های بالا فقط برای رجوع شما هستند و موارد را در دستگاه اصلی چک کنید ممکن است متفاوت باشند.

بررسی برنامه

در اولین استفاده قبل از تماشای همه ی برنامه ها را بررسی کنید، Auto scan یا بررسی خودکار را انتخاب کنید. Manual scan را برای بررسی برنامه های خاص انتخاب کنید.

در فهرست دکمه های ◀/▶ را برای حرکت مکان نما انتخاب کنید. دکمه ▶ برای انتخاب گزینه موردنظر انتخاب کنید. دکمه (back) عقب را برای برگشتن به فهرست قبلی انتخاب کنید.

بررسی خودکار

۱. Menu یا فهرست را برای ورود به فهرست اصلی فشار دهید.

۲. ▲/▼ را برای آهنگ و را برای ورود به بررسی خودکار انتخاب کنید.

۳. Ok را برای بررسی خودکار فشار دهید برای توقف در بررسی خودکار دکمه ی بازگشت را فشار داده تا به فهرست قبلی وارد شوید.

بررسی کمی زمان می برد. بعد از اتمام بررسی خودکار برنامه شروع به پخش می کند.


اتصال شبکه:

این تلویزیون اتصال شبکه را پشتیبانی می کند. حالت های اتصال شبکه: کابل اتصال و اتصال WIFI

فهرست و زیر مجموعه


اتصال به شبکه با کابل روتر یا مودم

خروجی روی دیوار

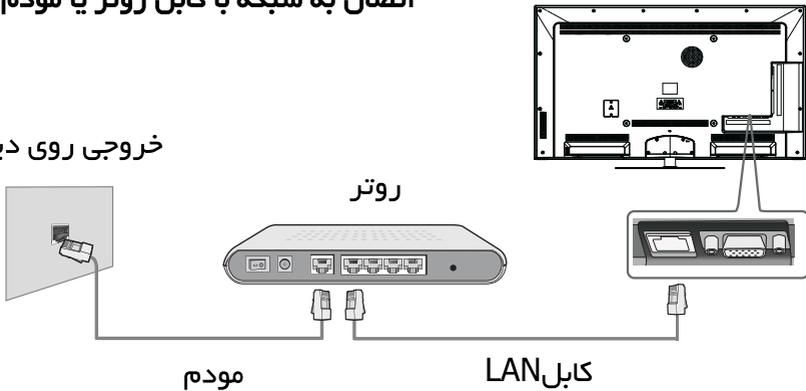

اتصال به شبکه با WIFI

خروجی روی دیوار

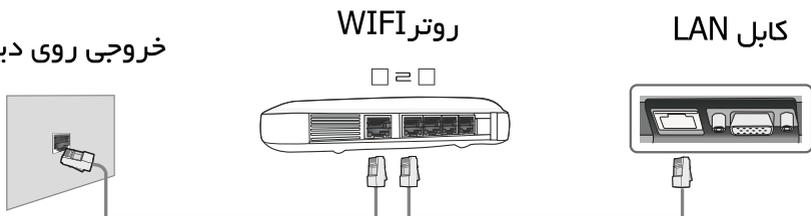

تنظیمات شبکه

Home یا صفحه اصلی را برای ورود به فهرست اصلی فشار دهید. **▲/▼◀/▶** را برای تنظیمات سیستم فشار داده و OK را برای ورود به زیرمجموعه فشار دهید. **▲/▼** را برای تنظیمات شبکه فشار داده و OK را برای ورود فشار دهید. برای وضعیت شبکه: تنظیمات کابل، تنظیمات WIFI فشار دهید.



عملکرد 3D

این تلویزیون فیلم‌ها و برنامه‌های با پوشش 3D و 2D را نیرز می‌تواند پخش کند. قالب پشتیبانی نسبت مبدا قابل تغییر است. 2D را زمانی که به شبکه متصل است به 3D تبدیل نمی‌کند حالت 3D به قالب 720P به بالا نیاز دارد.

۱. ▲ / ▼ را برای مرجع 2D یا 3D انتخاب کرده و OK را برای تایید فشار دهید. تبدیل 2D به 3D را برای تبدیل کردن 2D به قالب 3D انتخاب کنید.
 ۲. 3D را برای تنظیمات 3D فشار دهید. ▲ / ▼ را برای انتخاب قالبهای 3D (تبدیل قالبهای 3D، 3D به 2D، چپ و راست، بازیابی انطباقی، بهینه سازی رنگ 3D، عمق زمینه، عرض زمینه و...) را فشار دهید.
- ◀ / ▶ را برای انتخاب تنظیمات فشار دهید.





LED TV