



# TEA MAKER

MODEL: RAK-TM 3070

## OPERATING MANUAL



PLEASE KEEP THIS OPERATING MANUAL FOR FUTURE REFERENCE




## FEATURE

The Electric tea kettle has a stainless steel fever chassis and combined power base. It has a separation design with the power base and has an insulation disk. It has many functions such as boiling water. Coffee and tea.

The Electric tea kettle made by the imports of steel and food-grade plastic. It has a water level gauge in the kettle.

## NAMES OF PARTS

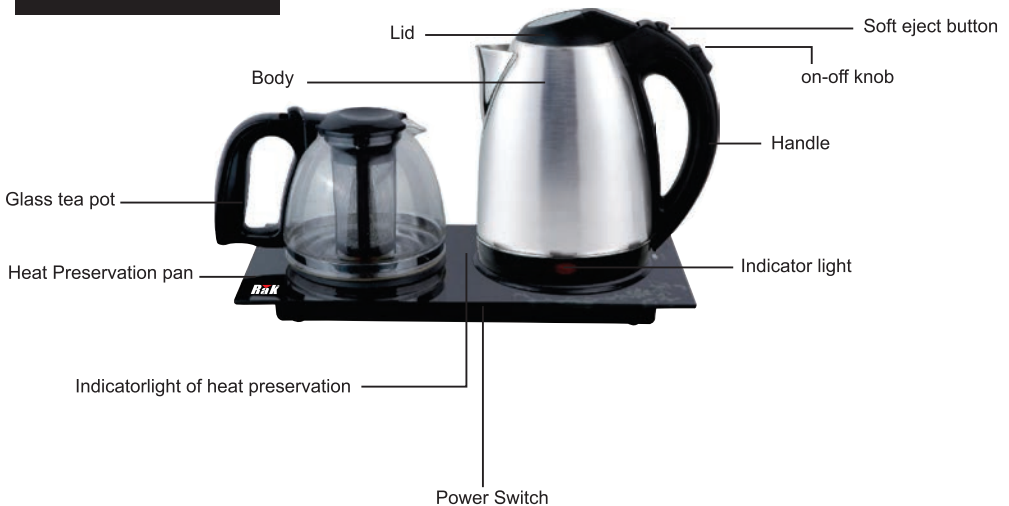

## OPERATION

1. Clean the kettle before you use it.
2. Keep enough water. You can not keep the water more than the MAX or below the MIN>That will destroy the kettle.

- 
3. Put the kettle on the power base when you fill water. It will cut off the power automatically after 30 seconds when the water is boiled. And the indicator will extinguished.
  4. You can inject the boiled water in the small jug. Then put it in the preservation pan. Open the switch. it is working when the indicator is shining.
  5. You must cut off the power. Extract the power cord before you clean the kettle. You can not put the power base. Power cord and plug in the water when you clean the product.
  6. You can use the wet wiper to clean the product. But please do not use the volatile oil or organic cleaning liquid.
  7. When you use the tea kettle again be sure it is cooling and check the plug is dry.
  8. To reducing the furring remove the water in the kettle when you do not use it.
  9. The power must use grounding and three-core socket for security.

## NOTES

1. Before using the kettle. Check the voltage to be the same as rating lable.
2. Do not use the kettle before powering water in it because it is so it will destroy the product.
3. Keep the plug and the power cord dry.
4. When the product is working do not touch the plug in the power base with metal items.
5. When the water is boiling please do not touch the body of the kettle because it is too hot that will hurt you.
6. You can use vinegar to clean the furring in the kettle on time.
7. The kettle is only for boiling water do not use it for heating paste food such as milk.
8. please keep far from children when the kettle is working.
9. When the power cord is damaged do not heck it yourself take it to the repair of the factory.
10. When the kettle is working do not move it keep the being extracted from the outlet.
11. when the kettle is working do not power water in the kettle.
12. You can clean the kettle on time but do not put all of the kettle water; that will destroy the product;
13. Do not put the kettle near the heat; it will destroy the body of the kettle.
14. Do not put the product near the edge of desk.
15. the kettle must be used with the dedicated power base.

۱. قبل از استفاده از کتری از همسان بودن ولتاژ با برچسب کتری اطمینان حاصل کنید.
۲. استفاده از کتری بدون آب خطرناک بوده و به آن آسیب می رساند.
۳. دو شاخه و سیم برق را خشک نگه دارید.
۴. هنگامی که چای ساز در حال کار است، از تماس اشیا، فلزی با گرمکن سینی اجتناب ورزید.
۵. هنگامی که آب در حال جوشیدن است بدنه کتری را لمس نکنید، زیرا گرمای زیاد بدنه به شما صدمه خواهد زد.
۶. می توانید از سرکه برای تمیز کردن رسوبات داخل کتری استفاده کنید.
۷. هیچ جایی از کتری را هنگام جوشیدن آب لمس نکنید، زیرا بخار آب بسیار داغ است و به شما صدمه خواهد زد.
۸. کتری فقط برای به جوش آوردن آب است، از آن برای گرم کردن سایر مایعات مثل شیر استفاده نکنید.
۹. لطفا کودکان را از کتری در حال کار دور نگه دارید.
۱۰. اگر سیم برق آسیب دید، خودتان آن را چک نکنید و به تعمیرگاه مجاز مراجعه کنید.
۱۱. هنگامی که کتری در حال کار است آن را تکان ندهید و قبل از آن دوشاخه را از برق خارج کنید.
۱۲. هنگامی که کتری در حال کار است نباید آب داخل آن بریزید.
۱۳. برای تمیز کردن کتری نباید کل کتری را وارد آب کنید، این کار به محصول آسیب خواهد زد.
۱۴. کتری را نزدیک منبع گرمایشی قرار ندهید، این کار به بدنه کتری آسیب خواهد زد.
۱۵. محصول را روی لبه میز قرار ندهید، مراقب باشید که سیم برق زیر پایتان گیر نکند.
۱۶. این کتری باید با سینی پایه همراه با خودش استفاده شود.

۳. بعد از پر کردن کتری آن را روی سینی پایه قرار دهید. بعد از ۳۰ ثانیه و با جوش آمدن آب برق به طور خودکار قطع خواهد شد و چراغ نمایشگر خاموش خواهد شد.

۴. می‌توانید آب جوش آمده را داخل قوری بریزید و قوری را روی صفحه نگه دارنده دما قرار دهید. با روشن کردن سوئیچ چراغ نمایشگر آن روشن می‌شود.

۵. قبل از تمیز کردن کتری، برق را قطع کنید و سیم برق را از پریز خارج کنید. هنگام تمیز کردن محصول هرگز سینی پایه، سیم برق و دو شاخه را در آب وارد نکنید.

۶. برای تمیز کردن محصول می‌توانید از پارچه مرطوب استفاده کنید اما از روغن‌های فرار و مایعات تمیز کننده آلی استفاده نکنید.

۷. هنگام استفاده مجدد از کتری مراقب باشید که کتری خنک و دوشاخه خشک باشد.

۸. برای کاهش رسوبات روی دیواره کتری، آب کتری را پس از استفاده از آن خارج کنید.

۹. برای حفظ امنیت از سوکت سه پایه با سیم اتصال به زمین استفاده کنید.

این چای ساز برقی بدنه ای از جنس فولاد ضد زنگ و سینی پایه قابل اتصال به برق دارد. چای ساز قابل جدا شدن از سینی پایه است و دارای صفحه عایق می باشد. این محصول دارای کاربردهایی نظیر جوشاندن آب و تهیه قهوه و چای می باشد. این چای ساز برقی از فولاد و پلاستیک مناسب برای نگهداری مواد غذایی ساخته شده است. دارای درجه نشانگر سطح آب داخل کتری می باشد و از طراحی زیبا و امنیت مناسب برخوردار است.

مصرف برق: ۲۰۰۰ وات

## نام اجزا



## عملکرد

۱. دیواره کتری را قبل از استفاده تمیز کنید.
۲. آب را در سطح مناسب حفظ کنید. سطح آب نباید از MAX بیشتر شود و یا از MIN پایین تر باشد، در غیر این صورت کتری آسیب خواهد دید.



# چای ساز

مدل : RAK-TM 3070

## دفتربه راهنما



با تشکر از انتخاب این محصول، برای کاربرد صحیح، لطفا این دفتربه راهنما را قبل از استفاده از محصول به دقت مطالعه کنید و از آن به خوبی نگهداری کنید.

